I3-C31


Smart Door Knobs




Installation Guide

IMPORTANT: Read the instructions carefully before operating the appliance and keep them for future reference.


WHAT IS INCLUDED

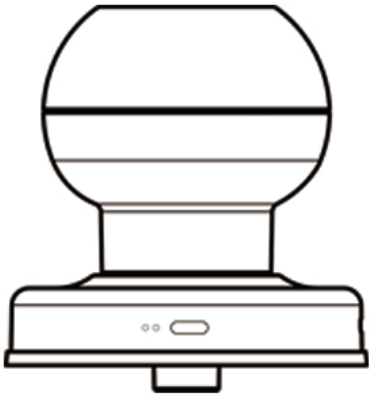


Front Knob*1

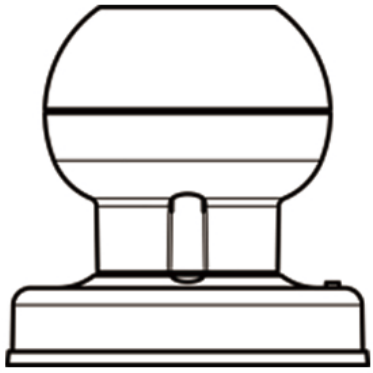


Back Knob*1

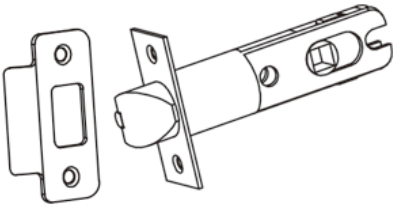


Latch and strike*1

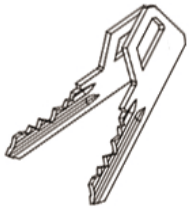

KEY*2

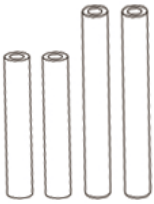

Standoffs*4

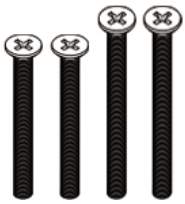


Screw A*4




Screw B*4

PRODUCT DIMENSIONS

Front Knob

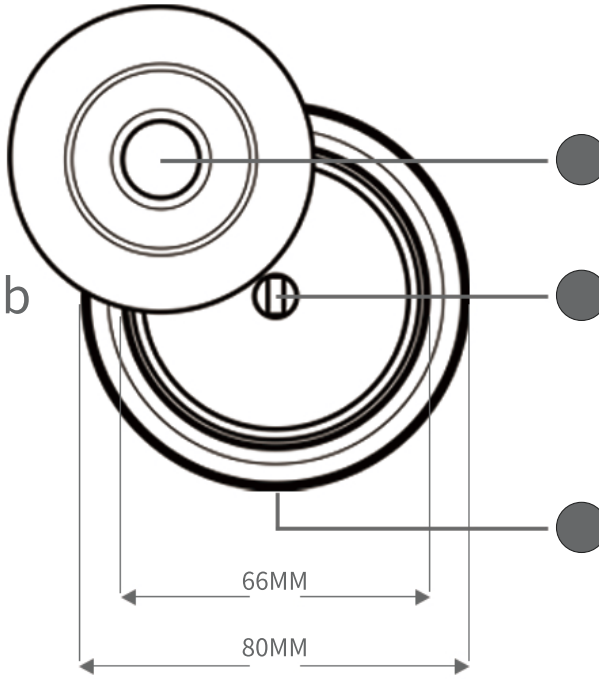


Back Knob

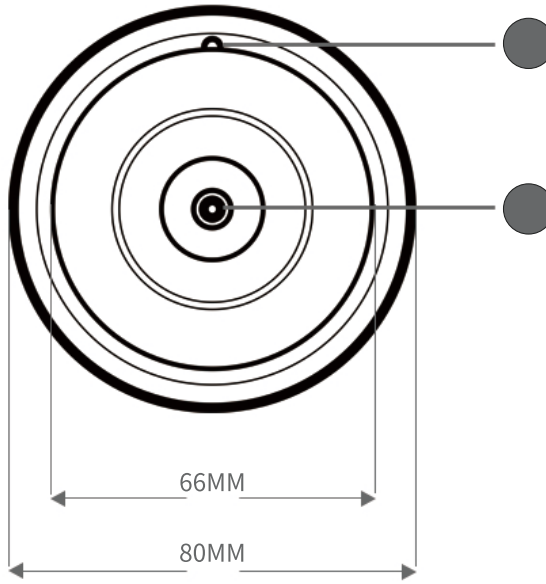

	Fingerprint reader		Keyhole
	Emergency port		Rset button
	Battery cover		


Tips: Green light means Unlock the door ; Blue light means add fingerprint ; red light means failed.

Open the emergency key port

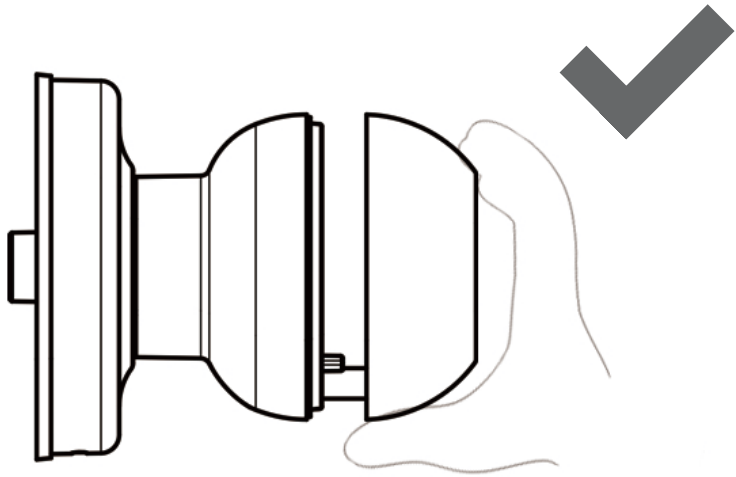


STEP 1

Pull out the cover

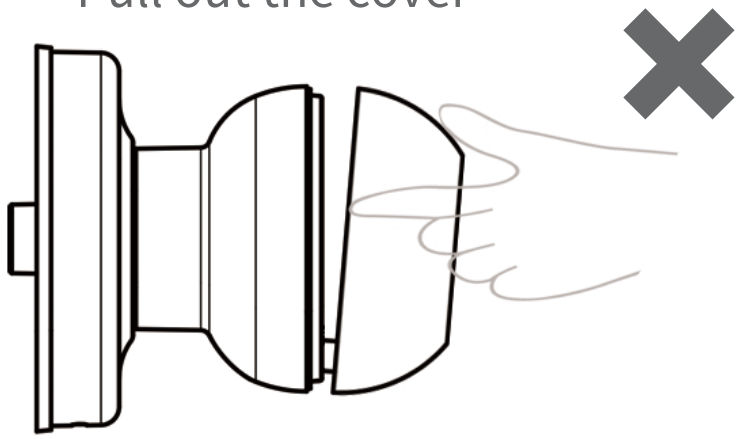



STEP 2

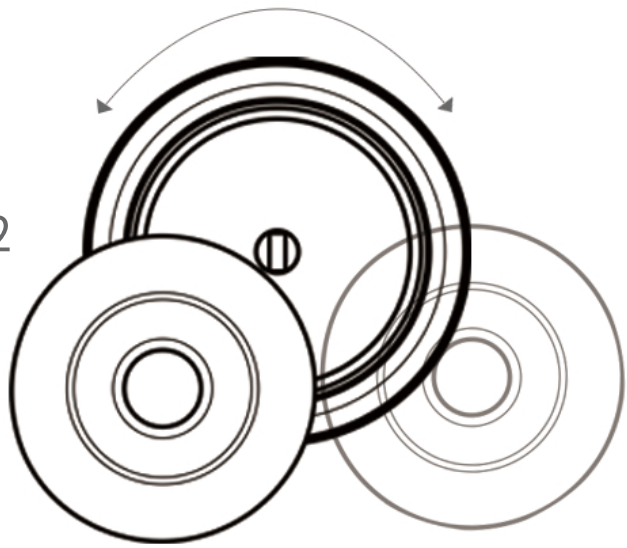

Rotate Left or Rotate Right


EXPLOSIVE VIEW

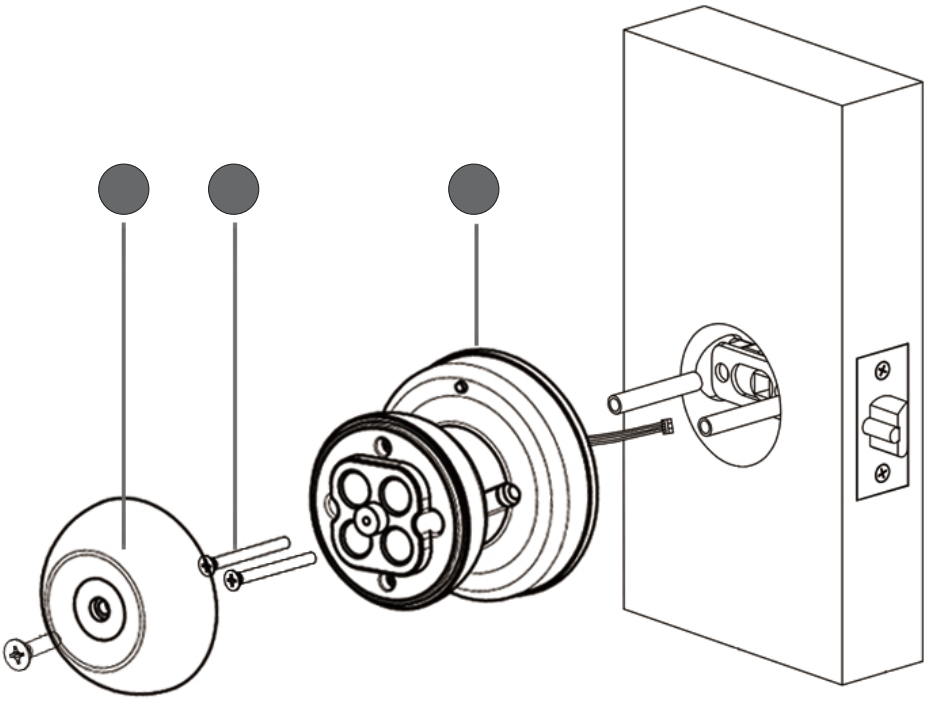

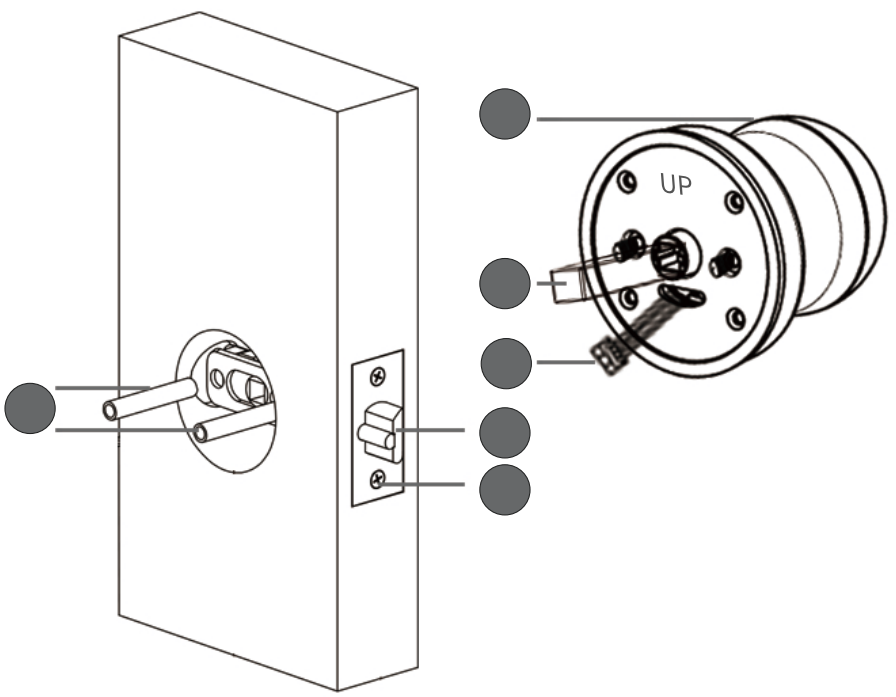


●	Back knob	●	Battery cover	●	Screw A
●	Front knob	●	Spindle	●	Cable
●	Bushings	●	Latch	●	Screw B


ADJEST LATCH

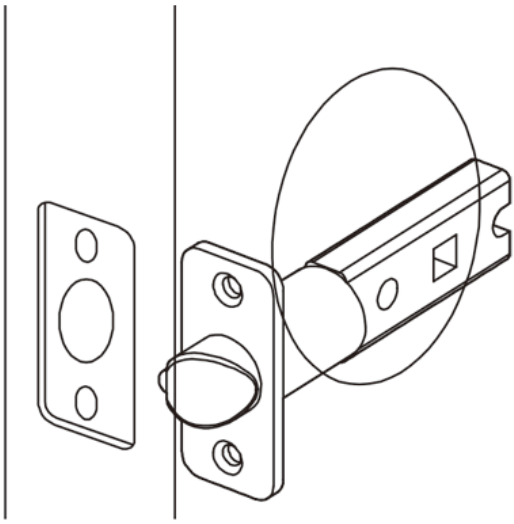


Hold the latch in front of the door hole with the latch face flush against the door edge.

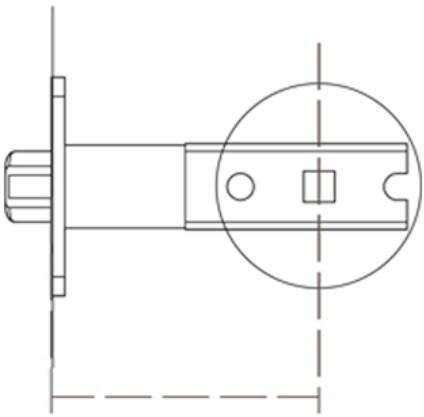


If the latch holes are centered in the door hole, no adjustment is required.

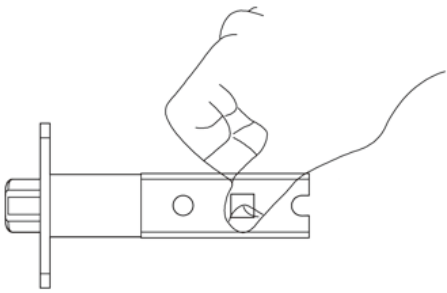


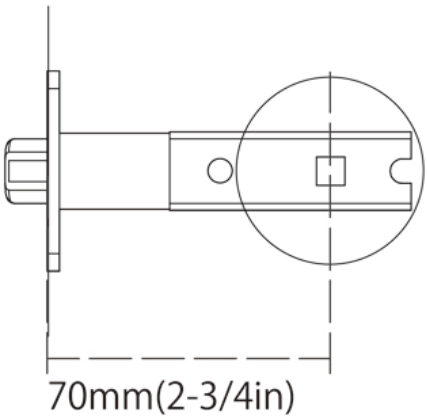


If the latch holes are NOT centered, adjust latch.

INSTALL LATCH

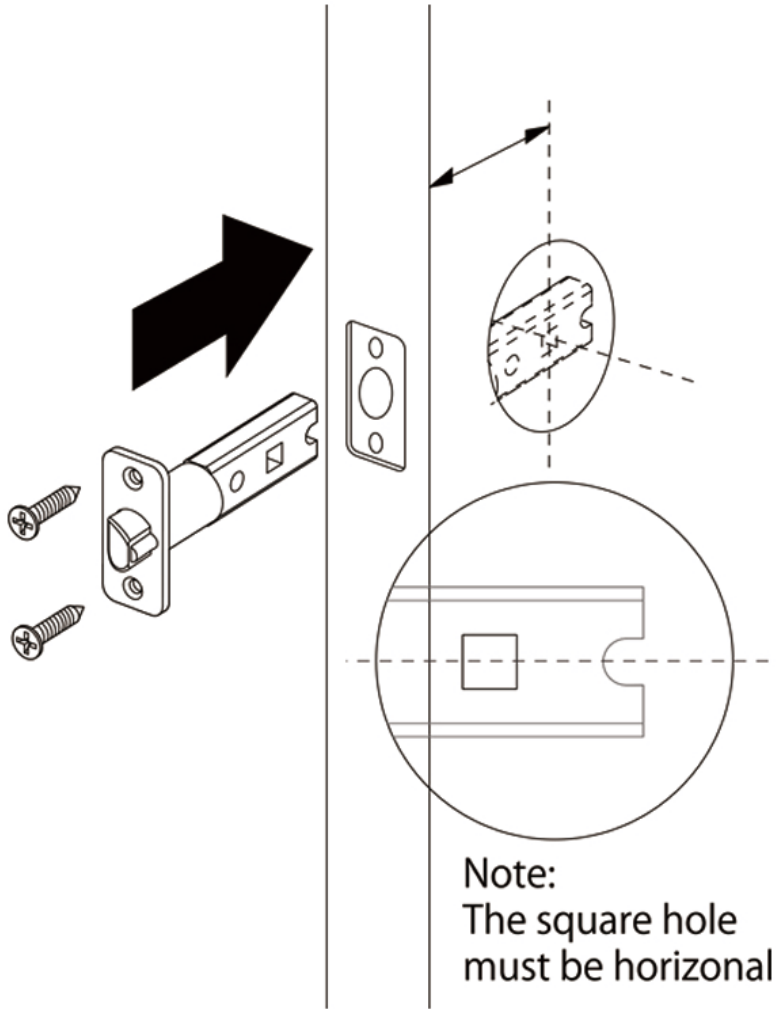


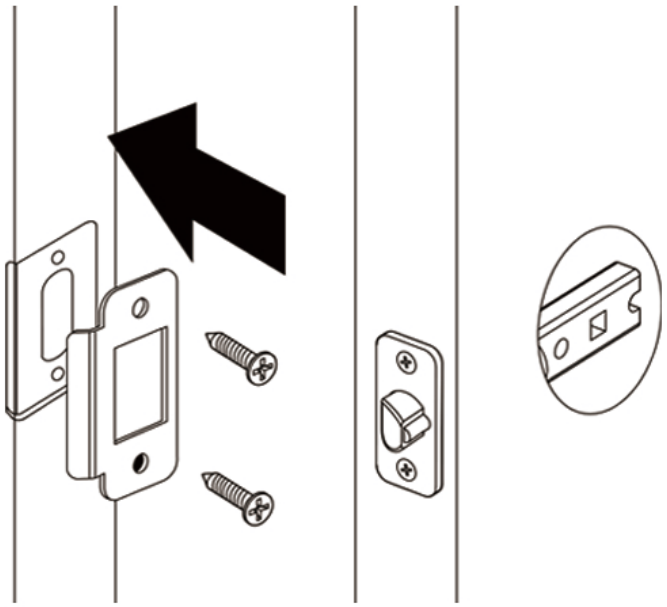


INSTALLING KNOB

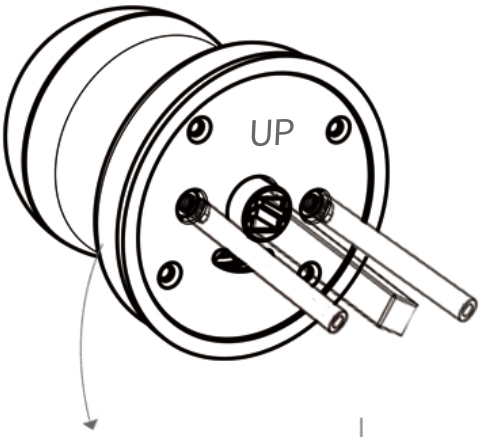


Take the outside lever (lever with the touch pad). Screw 2 bushings onto the 2 threaded posts in the horizontal position (same orientation as the lever handle).

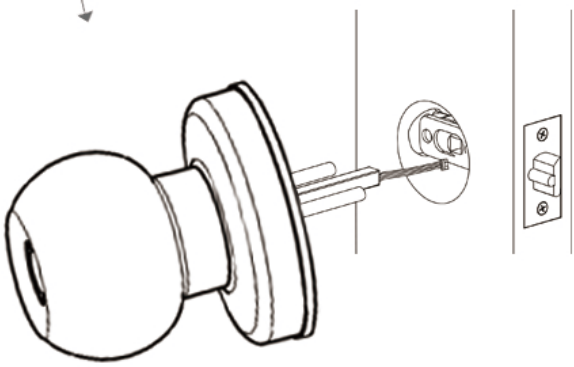

Install front panle on the door

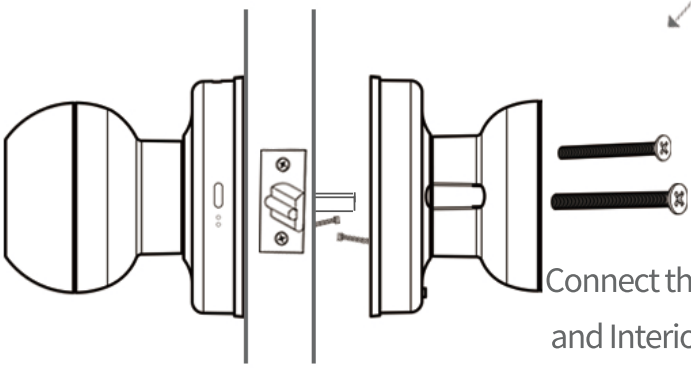

Connect the exterior knob and Interior knob wirings, use crew B Install the Interior Knob.

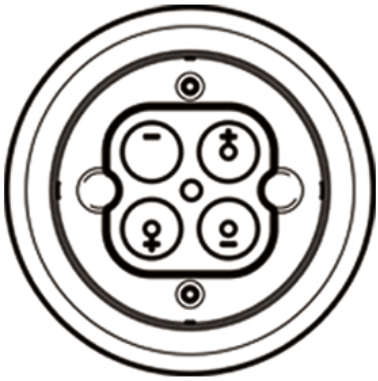


installing 4*AAA alkaline batteries


Note: DO NOT USE RECHARGEABLE BATTERIES

ADDING DEVICE

Scan the QR code to download Tuya app.

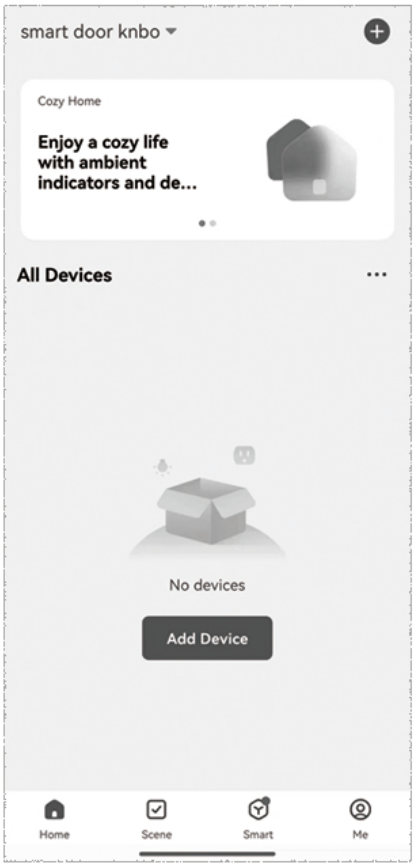


Top add device button

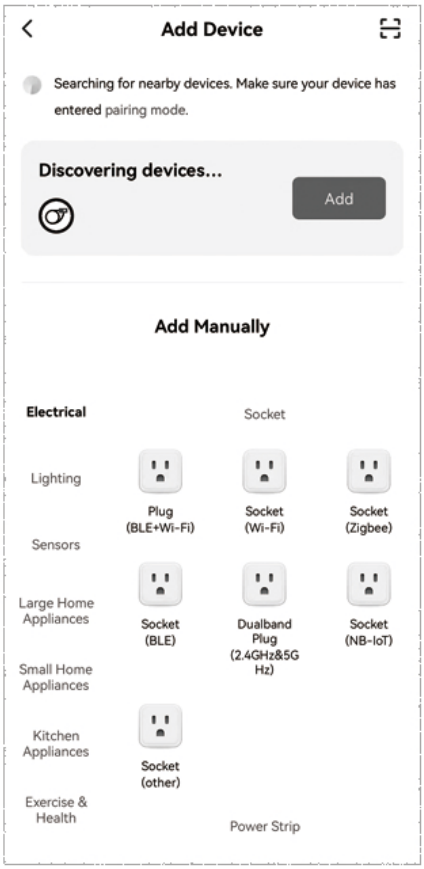

Top “Add” button

FUNCTION SETTINGS



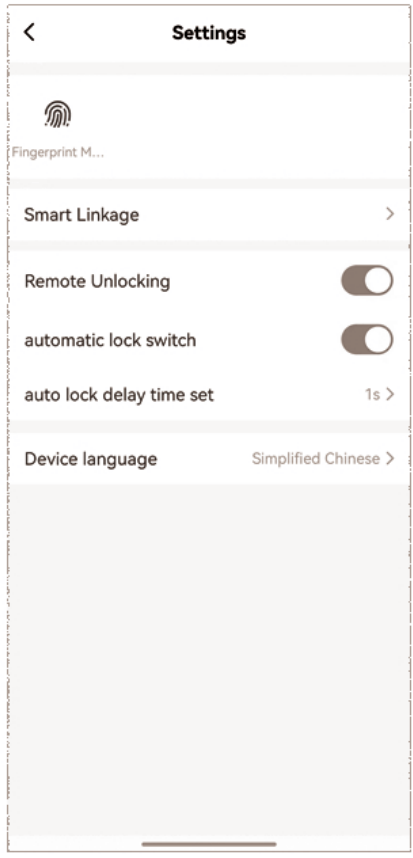

RESTORE FACTORY SETTING

